


Regions where conductors are prohibited

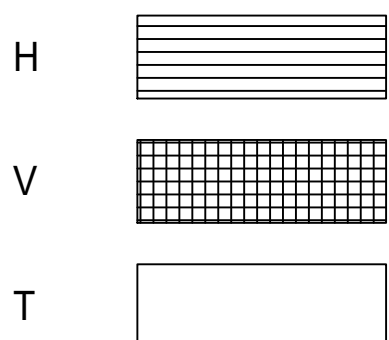

Legend

Controlling Clearance

Horizontal

Vertical

Transition = Vertical (ARC)

Transition between horizontal and vertical clearances

The horizontal clearances governs above the level of the roof or top of an installation to the point where the diagonal equals the vertical clearance requirement. Similarly, the horizontal clearance governs above or below projections from buildings, signs, or other installations to the point where the diagonal equals the vertical clearance requirement. From this point the transitional clearance shall equal the vertical clearance as shown above.

Clearances from Buildings and Other Structures