


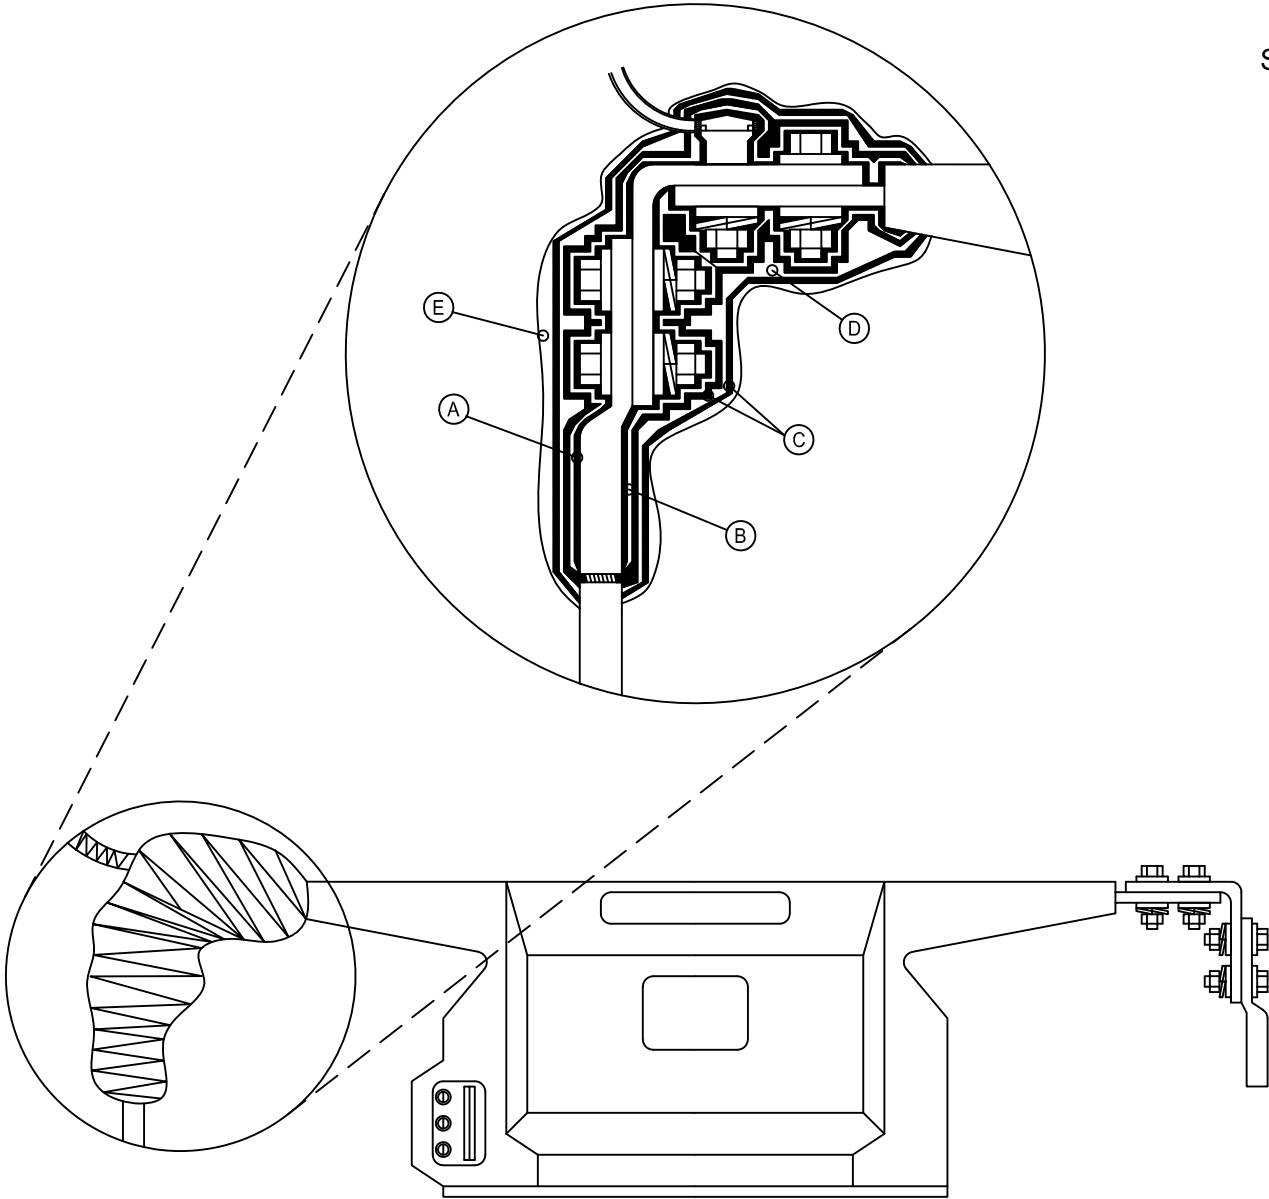

NOTES

- (1) Cover with one layer of item A.
 - allows reentry
- (2) One layer (half-lapped) of item B.
 - wrap tightly to minimize air spaces.
- (3) Smooth out connection with item D.
 - use mastic on high and low points of the connection.
- (4) Six layers (half-lapped) of item C, sticky side out.
 - this is the high voltage layer.
- (5) Three layers (half-lapped) of item E.
 - to protect from dust and moisture.

Material List			
Item	Quan.	Description	Stock #
A		2" Metal Shielding Tape	6145-000946
B		3/4" Rubber Semi-Conductive Tape-13	5970-253026
C		2" Hi-Voltage Tape 130 - C	5970-252531
D		3 3/4" x 3 3/4" Vinyl Mastic Pad	8030-000247
E		3/4" Plastic Tape 33	5970-253125
F		Cable Cleaner	6850-412799
G	2 Sets	Left, Center, Right "L" Brackets	0000-001255